

# Pig oxidized low density lipoprotein (OxLDL) ELISA Kit

Catalog Number. CSB-E06527p

For the quantitative determination of pig oxidized low density lipoprotein (OxLDL) concentrations in serum, plasma.

This package insert must be read in its entirety before using this product.

# If You Have Problems

#### **Technical Service Contact information**

Phone: 86-27-87582341

Fax: 86-27-87196150

Email: tech@cusabio.com

Web: <a href="https://www.cusabio.com/">https://www.cusabio.com/</a>

In order to obtain higher efficiency service, please ready to supply the lot number of the kit to us (found on the outside of the box).

#### PRINCIPLE OF THE ASSAY

This assay employs the competitive inhibition enzyme immunoassay technique. The microtiter plate provided in this kit has been pre-coated with pig OxLDL. Standards and samples are pipetted into the wells with a Horseradish Peroxidase (HRP) conjugated antibody specific for pig OxLDL. Following a wash to remove any unbound reagent, a substrate solution is added to the wells and color develops in opposite to the amount of pig OxLDL in samples. The color development is stopped and the intensity of the color is measured.

# DETECTION RANGE

0.39 nmol/ml-100 nmol/ml.

# **SENSITIVITY**

The minimum detectable dose of pig OxLDL is typically less than 0.39 nmol/ml. The sensitivity of this assay, or Lower Limit of Detection (LLD) was defined as the lowest pig OxLDL concentration that could be differentiated from zero.

# **SPECIFICITY**

This assay has high sensitivity and excellent specificity for detection of pig OxLDL. No significant cross-reactivity or interference between pig OxLDL and analogues was observed.

**Note:** Limited by current skills and knowledge, it is impossible for us to complete the cross-reactivity detection between pig OxLDL and all the analogues, therefore, cross reaction may still exist.

# PRECISION

# Intra-assay Precision (Precision within an assay): CV%<8%

Three samples of known concentration were tested twenty times on one plate to assess.

# Inter-assay Precision (Precision between assays): CV%<10%

Three samples of known concentration were tested in twenty assays to assess.

# LIMITATIONS OF THE PROCEDURE

- FOR RESEARCH USE ONLY. NOT FOR USE IN DIAGNOSTIC PROCEDURES.
- The kit should not be used beyond the expiration date on the kit label.
- Do not mix or substitute reagents with those from other lots or sources.
- If samples generate values higher than the highest standard, dilute the samples with Sample Diluent and repeat the assay.
- Any variation in Sample Diluent, operator, pipetting technique, washing technique, incubation time or temperature, and kit age can cause variation in binding.
- This assay is designed to eliminate interference by soluble receptors, binding proteins, and other factors present in biological samples. Until all factors have been tested in the Immunoassay, the possibility of interference cannot be excluded.

# **MATERIALS PROVIDED**

Reagents	Quantity
Assay plate	1(96 wells)
Standard	6 x 0.5 ml
HRP-conjugate	1 x 6 ml
Sample Diluent	2 x 20 ml
Wash Buffer (25 x concentrate)	1 x 20 ml
TMB Substrate	1 x 10 ml
Stop Solution	1 x 10 ml
Adhesive Strip (For 96 wells)	4
Instruction manual	1

# **STANDARD CONCENTRATION**

Standard	S0	S1	S2	S3	S4	S5
Concentration (nmol/ml)	0	0.39	1.56	6.25	25	100

# **STORAGE**

Unopened kit	Store at 2 - 8°C. Do not use the kit beyond the expiration date.			
	Coated assay plate	May be stored for up to 1 month at 2 - 8°C.  Try to keep it in a sealed aluminum foil bag,  and avoid the damp.		
	HRP-conjugate			
Opened kit	Standard			
	Sample Diluent	May be stored for up to 1 month at 2 - 8°C.		
	Wash Buffer	way be stored for up to 1 month at 2 - 6 C.		
	TMB Substrate			
	Stop Solution			

<sup>\*</sup>Provided this is within the expiration date of the kit.

# OTHER SUPPLIES REQUIRED

- Microplate reader capable of measuring absorbance at 450 nm, with the correction wavelength set at 540 nm or 570 nm.
- An incubator which can provide stable incubation conditions up to 37°C+0.5°C
- Squirt bottle, manifold dispenser, or automated microplate washer.
- Absorbent paper for blotting the microtiter plate.
- 100ml and 500ml graduated cylinders.
- Deionized or distilled water.
- Pipettes and pipette tips.
- Test tubes for dilution.

## **PRECAUTIONS**

The Stop Solution provided with this kit is an acid solution. Wear eye, hand, face, and clothing protection when using this material.

# SAMPLE COLLECTION AND STORAGE

- Serum Use a serum separator tube (SST) and allow samples to clot for two hours at room temperature or overnight at 4°C before centrifugation for 15 minutes at 1000 ×g. Remove serum and assay immediately or aliquot and store samples at -20°C or -80°C. Avoid repeated freeze-thaw cycles.
- Plasma Collect plasma using EDTA, or heparin as an anticoagulant.
   Centrifuge for 15 minutes at 1000 ×g at 2-8°C within 30 minutes of collection. Assay immediately or aliquot and store samples at -20°C or -80°C. Avoid repeated freeze-thaw cycles.

# SAMPLE PREPARATION

Serum and plasma samples require a 1000-fold dilution into Sample Diluent. The suggested 1000-fold dilution can be achieved by adding  $5\mu$ l sample to  $95\mu$ l of Sample Diluent first, then complete the 1000-fold dilution by adding  $5\mu$ l of this solution to  $245\mu$ l of Sample Diluent. The recommended dilution factor is for reference only. The optimal dilution factor should be determined by users according to their particular experiments.

#### Note:

- CUSABIO is only responsible for the kit itself, but not for the samples consumed during the assay. The user should calculate the possible amount of the samples used in the whole test. Please reserve sufficient samples in advance.
- 2. Samples to be used within 5 days may be stored at 2-8°C, otherwise samples must be stored at -20°C (≤1month) or -80°C (≤2month) to avoid loss of bioactivity and contamination.
- 3. Grossly hemolyzed samples are not suitable for use in this assay.
- 4. If the samples are not indicated in the manual, a preliminary experiment to determine the validity of the kit is necessary.
- Please predict the concentration before assaying. If values for these are not within the range of the standard curve, users must determine the optimal sample dilutions for their particular experiments.
- Tissue or cell extraction samples prepared by chemical lysis buffer may cause unexpected ELISA results due to the impacts of certain chemicals.
- Owing to the possibility of mismatching between antigen from other resource and antibody used in our kits (e.g., antibody targets conformational epitope rather than linear epitope), some native or recombinant proteins from other manufacturers may not be recognized by our products.
- Influenced by the factors including cell viability, cell number and also sampling time, samples from cell culture supernatant may not be detected by the kit.

 Fresh samples without long time storage are recommended for the test.
 Otherwise, protein degradation and denaturalization may occur in those samples and finally lead to wrong results.

# REAGENT PREPARATION

# Note:

- Kindly use graduated containers to prepare the reagent. Please don't prepare the reagent directly in the Diluent vials provided in the kit.
- Bring all reagents to room temperature (18-25°C) before use for 30min.
- To minimize imprecision caused by pipetting, use small volumes and ensure that pipettors are calibrated. It is recommended to suck more than 10ul for once pipetting.
- Distilled water is recommended to be used to make the preparation for reagents. Contaminated water or container for reagent preparation will influence the detection result

Wash Buffer(1x)- If crystals have formed in the concentrate, warm up to room temperature and mix gently until the crystals have completely dissolved. Dilute 20 ml of Wash Buffer Concentrate (25 x) into deionized or distilled water to prepare 500 ml of Wash Buffer (1 x).

#### ASSAY PROCEDURE

Bring all reagents and samples to room temperature before use. Centrifuge the sample again after thawing before the assay. It is recommended that all samples and standards be assayed in duplicate.


- 1. Prepare all reagents and samples as directed in the previous sections.
- Determine the number of wells to be used and put any remaining wells and the desiccant back into the pouch and seal the ziploc, store unused wells at 4°C
- Set a Blank well without any solution.
- Add 50µl of Standard or Sample per well.
- Add 50µl of HRP-conjugate to each well immediately (not to Blank well).
- Mix well and then incubate for 40 minutes at 37°C. A plate layout is provided to record standards and samples assayed.
- 7. Aspirate each well and wash, repeating the process four times for a total of five washes. Wash by filling each well with Wash Buffer (200µl) using a squirt bottle, multi-channel pipette, manifold dispenser, or autowasher, and let it stand for 2 minutes, complete removal of liquid at each step is essential to good performance. After the last wash, remove any remaining Wash Buffer by aspirating or decanting. Invert the plate and blot it against clean paper towels.
- Add 90µl of TMB Substrate to each well. Incubate for 20 minutes at 37°C.
   Protect from light.
- Add 50µl of **Stop Solution** to each well, gently tap the plate to ensure thorough mixing.
- 10. Determine the optical density of each well within 5 minutes, using a microplate reader set to 450 nm. If wavelength correction is available, set to 540 nm or 570 nm. Subtract readings at 540 nm or 570 nm from the readings at 450 nm. This subtraction will correct for optical imperfections in the plate. Readings made directly at 450 nm without correction may be higher and less accurate.

<sup>\*</sup>Samples may require dilution. Please refer to Sample Preparation section.

#### Note:

- The final experimental results will be closely related to validity of the products, operation skills of the end users and the experimental environments.
- 2. Samples or reagents addition: Please use the freshly prepared Standard. Please carefully add samples to wells and mix gently to avoid foaming. Do not touch the well wall as possible. For each step in the procedure, total dispensing time for addition of reagents or samples to the assay plate should not exceed 10 minutes. This will ensure equal elapsed time for each pipetting step, without interruption. Duplication of all standards and specimens, although not required, is recommended. To avoid cross-contamination, change pipette tips between additions of each standard level, between sample additions, and between reagent additions. Also, use separate reservoirs for each reagent.
- 3. Incubation: To ensure accurate results, proper adhesion of plate sealers during incubation steps is necessary. Do not allow wells to sit uncovered for extended periods between incubation steps. Once reagents have been added to the well strips, DO NOT let the strips DRY at any time during the assay. Incubation time and temperature must be observed.
- 4. Washing: The wash procedure is critical. Complete removal of liquid at each step is essential to good performance. After the last wash, remove any remaining Wash Solution by aspirating or decanting and remove any drop of water and fingerprint on the bottom of the plate. Insufficient washing will result in poor precision and falsely elevated absorbance reading. When using an automated plate washer, adding a 2 minutes soak period following the addition of wash buffer, and/or rotating the plate 180 degrees between wash steps may improve assay precision.
- 5. Controlling of reaction time: Observe the change of color after adding TMB Substrate (e.g. observation once every 10 minutes), TMB Substrate should change from colorless or light blue to gradations of blue. If the color is too deep, add Stop Solution in advance to avoid excessively strong reaction which will result in inaccurate absorbance reading.
- TMB Substrate is easily contaminated. TMB Substrate should remain colorless or light blue until added to the plate. Please protect it from light.
- 7. Stop Solution should be added to the plate in the same order as the TMB Substrate. The color developed in the wells will turn from blue to yellow upon addition of the Stop Solution. Wells that are green in color indicate that the Stop Solution has not mixed thoroughly with the TMB Substrate...

#### ASSAY PROCEDURE SUMMARY

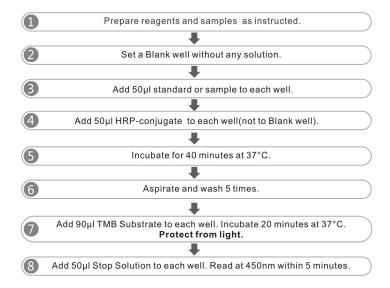

<sup>\*</sup>Samples may require dilution. Please refer to Sample Preparation section.

#### CALCULATION OF RESULTS

Using the professional soft "Curve Expert" to make a standard curve is recommended, which can be downloaded from our web.

Average the duplicate readings for each standard and sample and subtract the average optical density of Blank.

Create a standard curve by reducing the data using computer software capable of generating a four parameter logistic (4-PL) curve-fit. As an alternative, construct a standard curve by plotting the mean absorbance for each standard on the x-axis against the concentration on the y-axis and draw a best fit curve through the points on the graph. The data may be linearized by plotting the log of the pig OxLDL concentrations versus the log of the O.D. and the best fit line can be determined by regression analysis. This procedure will produce an adequate but less precise fit of the data.

If samples have been diluted, the concentration read from the standard curve must be multiplied by the dilution factor.

# 猪氧化低密度脂蛋白(OxLDL)酶联免疫试剂盒 使用说明书

# 【产品编号】CSB-E06527p

【预期应用】ELISA 法定量测定猪血清、血浆中 OxLDL 含量。

#### 【产品性能指标】

- 1、 检测范围: 0.39 nmol/ml 100 nmol/ml
- 2、 灵敏度: 0.39 nmol/ml
- 3、 精密度: 批内差 CV%<8%, 批间差 CV%<10%
- 4、 特异性: 本试剂盒特异性检测猪 OxLDL, 且与其他相关蛋白无交叉反应。

#### 【实验原理】

采用竞争酶联免疫法检测猪 OxLDL 含量。首先用猪 OxLDL 包被微孔板,制备成固相抗原,然后加入待测标本、辣根过氧化物酶标记抗猪 OxLDL 抗体,使之形成抗原-抗体 (HRP) 复合物。样本中的猪 OxLDL 与预包被的猪 OxLDL 竞争结合 HRP 标记的抗体。经过彻底洗涤后用底物 TMB 显色。TMB 在过氧化物酶的催化下转化成蓝色,并在酸的作用下转化成最终的黄色。颜色的深浅和样本中的猪 OxLDL 呈负相关。用酶标仪在 450nm 波长下测定吸光度 (OD 值),通过计算机或作图拟合浓度-吸光度曲线,算出待测标本中猪 OxLDL 含量。

#### 【试剂盒组成成分】

组份	96T
酶标板 (Assay plate)	96 孔
标准品 (Standard)	6 x 0.5 ml/瓶
酶结合物 (HRP-conjugate)	1 x 6 ml/瓶
样本稀释液 (Sample Diluent)	2 x 20 ml/瓶
浓洗涤液 (Wash Buffer)	1 x 20 ml/瓶 (25×)
底物溶液 (TMB Substrate)	1 x 10 ml/瓶
终止液 (Stop Solution)	1 x 10 ml/瓶
板贴	4

#### 【标准品浓度】

E-M-1 HH LA-12						
编号	S0	S1	S2	S3	S4	S5
nmol/ml	0	0.39	1.56	6.25	25	100

#### 【存储条件及有效期】

未开封试剂盒	试剂盒避光保存于2-8℃。有效期为六个月。 请在试剂盒标注的有效日期内使用。			
	预包被的酶标板	酶标板打开后应置有干燥剂的铝箔袋中置于 2-8℃密封防潮保存。有效期内 2-8℃条件下最多可保存一个月。		
	酶结合物	1		
开封试剂盒	标准品			
	样本稀释液	] 有效期内 <b>2-8</b> ℃条件下最多可保存一个月。		
	浓洗涤液	一 有双朔 <b>内2-0</b> C录件下取多可保存一个方。		
	底物溶液	<u> </u>		
	终止液			

# 【所需试剂和器材】

标准规格酶标仪; 高速离心机; 电热恒温培养箱; 干净的试管和离心管; 容量瓶; 系列可调节移濟器及吸头; 多诵道移液器, 蒸馏水 等

## 【样本采集及保存】

- 1、 血清:全血标本请于室温放置2小时或4℃过夜后于1000g离心15分钟,取上清即可立即检测;或进行分装,并将标本放于-20℃或-80℃保存,但应避免反复冻融。解冻后的样品应再次离心,然后检测。
- 2、 血浆:可用 EDTA 或肝素作为抗凝剂,标本采集后 30 分钟内于 2-8°C 1000 g 离心 15分钟,取上清即可立即检测;或进行分装,并将标本放于-20℃或-80℃保存,但应避免反复冻融。解冻后的样品应再次离心,然后检测。

注:标本溶血会影响最后检测结果,因此溶血标本不宜进行此项检测。

#### 【样本稀释】

血清,血浆样本用样本稀释液进行1:1000倍稀释后进行检测,具体操作如下: 取5µl 样本加入到95µl 的样本稀释液 (1:20稀释) 中混匀。再从上述稀释液中取5µl加入到245µl 样本稀释液 (1:50稀释) 中混匀。二步完成后得到的即为1:1000倍稀释后的样本。此推荐稀释倍数仅供参考,用户应根据实验自行确定其最优稀释倍数。

#### 【试剂配制】

洗液工作液: 浓洗涤液按1:25倍用去离子水进行稀释。例如用量筒量取240ml去离子水,倒入烧杯或其他洁净容器中,再量取10ml浓洗涤液,均匀加入,搅拌混匀,在临用前配妥。浓洗涤液低温保存会有盐析出,稀释时可在水浴中加温助溶。

#### 【重要提示】

- 实验开始前,请提前配置好所有试剂。试剂或样本稀释时,均需混匀,混匀时尽量避免起 泡。
- 2、用户在初次使用试剂盒时,应将各种试剂管离心数分钟,以便管盖和管壁上的液体集中到管底。
- 3、 在配制检测溶液工作液时,请以相应的稀释液配制,不能混淆。
- 4、因实际装量多于标示装量,配制工作试剂请用精准的计量工具(移液枪或量筒等)量取,切勿不经量取直接使用。

#### 【操作步骤】

- 1、 将各种试剂移至室温(18-25℃)平衡至少30分钟,按前述方法配制试剂,备用。
- 2、 设置一个空白孔, 不加任何溶液。
- 3、 加样: 分别设标准品孔、待测样本孔。每孔分别加标准品或待测样本 50ul。
- 4、 每孔加酶结合物 50ul (空白孔不加)。轻轻晃动混匀,覆上板贴, 37℃温育 40 分钟。
- 5、 弃去孔内液体, 用干, 洗板 5 次。每次浸泡 2 分钟, 200 ul/孔, 用干。
- 6、 依序每孔加底物溶液 90ul, 37℃避光显色 20 分钟。
- 7、 依序每孔加终止溶液 50ul, 终止反应。
- 8、 在反应终止后 5 分钟内用酶标仪在 450nm 波长依序测量各孔的光密度 (OD 值)。

#### 【操作要点】

- 为保证检测结果的准确性,建议标准品及样本均设双孔测定。每次检测均需做标准曲线。
- 2、如标本中待测物质含量过高,请先用样本稀释液进行稀释,以使样本符合试剂盒的检测范围,最后计算时再乘以相应的稀释倍数。
- 3、加样:加样时,请使用一次性的洁净吸头,避免交叉污染。加样时应尽量轻缓,避免起泡,将样本加于酶标板孔底部,切勿沿孔壁加样。一次加样时间最好控制在10分钟内,如标本数量多,推荐使用排枪加样。

- 4、温育:为防止样本蒸发或污染,温育过程中酶标板必须覆上板贴,实验过程中酶标板应避免处于干燥的状态。温育过程中应随时观察温箱温度是否恒定于37℃,及时调整。温育过程中,温箱不易开启太多次,以免影响温度平衡。
- 5、洗涤:洗涤过程非常重要,不充分的洗涤易造成假阳性。
  - (1) 手工洗板方法:吸去(不可触及孔壁和孔底)或甩掉酶标板内的液体;在实验台上铺垫几层吸水纸,酶标板朝下轻拍几次;将推荐的洗涤缓冲液按200µl/孔注入孔内,浸泡2分钟。根据操作步骤中所述,重复此过程数次。
  - (2) 自动洗板:如果有自动洗板机,应在熟练使用后再用到正式实验过程中。
- 6、 **显色**: 为保证实验结果的准确性,底物反应时间到后应尽快加入终止液。可在加入底物溶液后每隔一段时间观察一下显色情况以控制反应时间(比如每隔 10 分钟)。当肉眼可见标准品前 3-4 孔有明显梯度蓝色,后 3-4 孔显色不明显时,即可加入终止液终止反应,此时蓝色立刻变为黄色。终止液的加入顺序应尽量与底物溶液的加入顺序相同。
- 7、底物溶液应为浅蓝色或无色,如果颜色严重变深则必须弃用。底物溶液易受污染,请避光 妥善保存。

#### 【数据处理】

可将标准品及样本值减去空白孔数值后绘制曲线,如果设置复孔,则应取其平均值计算。以标准品的浓度为纵坐标(对数坐标),OD 值为横坐标(对数坐标),在对数坐标纸上绘出标准曲线。推荐使用专业制作曲线软件进行分析,可从我们的网站下载专业软件"Curve Expert",并根据提示制作标准曲线。根据样本 OD 值,由标准曲线查出相应的浓度;或用标准品的浓度与 OD 值计算出标准曲线的回归方程式,将样本的 OD 值代入方程式,计算出样本浓度。若样本检测前进行过稀释,最后计算时需乘以相应的稀释倍数,即为样本的实际浓度。

## 【说明】

- 1、 本试剂盒仅供研究使用。
- 2、 中、英文说明书可能会有不一致之处,请以英文说明书为准。
- 3、 不同批号试剂不能混用。不要用其它生产厂家的试剂替换试剂盒中的试剂。
- 4、刚开启的酶标板孔中可能会含有少许水样物质,此为正常现象,不会对实验结果造成任何 影响。

Notes	